TST Item #s 1055, 1065, 1066

GigaPets™ Trolls

INSTRUCTIONS

Congratulations!

You are the proud new owner of a Giga Troll! Your Troll is going to want to play lots of games and will need your help to grow up happy and healthy. The happier and healthier your Troll is the higher your score will be! These instructions will help you along your way.

To activate your Giga Troll, pull the plastic tab from the back of the game.

Low Battery

If you see the low battery icon flash on the screen your battery is low and needs to be replaced immediately.

Setting the clock (Super Important)

1) When you first turn on the device, you will be in CLOCK MODE, ready to set the first hour.
2) Set the current time. Press LEFT/RIGHT to adjust the hour. When the correct hour is set, press ENTER.
3) Press LEFT/RIGHT to adjust the minutes. When the correct minutes are set, press ENTER.

Naming your Giga Troll

Now that your Troll has a birthday, it's time to give it a name!

1) Press LEFT and RIGHT to search through the alphabet.
2) Press ENTER to select a letter and move to the next space in the Troll's name. You may use up to 5 letters.
3) Press ENTER twice to accept the current name and return to GAME MODE.

Viewing and Adjusting the Clock, Name, and Sound

1) Press MODE to switch from GAME MODE to SETTINGS.
2) In SETTINGS, press RIGHT to see your Troll's name and press RIGHT again to select sound on/off.
3) Press ENTER if you wish to adjust the time (clock will flash).
4) After you set the time, your Troll's name will be displayed.
5) Press ENTER if you wish to change your Troll's name.
6) Press MODE to return to GAME MODE.

The Game Screen

The game screen is your Troll's home. You will see the Troll move around the screen and go about its daily routine, just like a real Troll. Press the LEFT/RIGHT keys to light up the ICONS around the outside of the screen. These icons represent all of the different activities that allow you to interact with the Troll.

How to Play

Your Troll needs to play and be cared for to keep it happy and healthy. At various times, the Troll will require certain kinds of attention from you. When the Troll needs something it will beep and the ALERT icon will light up. Now you need to figure out what the Troll needs!

If the Troll is hungry, feed it. If the Troll is lonely, play with it. If the Troll is dirty, give it a bath. There are many different ways to interact with the Troll. The trick is to figure out what your Troll needs from you. Use the LEFT/RIGHT keys to select an activity and press ENTER to select it.

If you try to select an activity that the Troll doesn't want to do it may refuse. Keep trying other activities to figure out what it needs. Sometimes it just needs to nap. The Troll will give hints so if you can't figure it out just watch it for a while and see what it does.

⚠WARNING: This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any of the body, seekimmediate medical attention.

GigaPets Trolls™ and GigaPets® are trademarks of Rehco, L.L.C. under license to Top Secret Toys International Ltd., Room 307, Heng Ngai Jewelry Centre, 4 Hok Yuen St. East, Hung Hom, Hong Kong. GigaPets Trolls™ are manufactured by Top Secret Toys International Ltd. TM denotes US Trademark registration under license from Rehco, L.L.C. ©2017 Rehco, L.L.C. Chicago, Illinois 60607, USA.

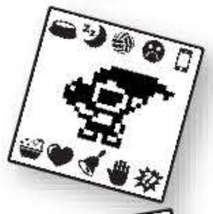

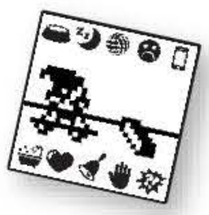

ALERT

You cannot choose this icon. Instead, this icon will light up to let you know that your pet needs something.

SLOT MACHINE

When your Troll is sad and won't play games with you, you can use this icon to cheer it up. There are two games you can play to give it a happiness boost. If you lose a game, you will see a slot machine. You will get three chances to match up the eyes and recover some happiness. To skip the slot machine press MENU.

FEED

When you select this activity, you will be given a choice of foods for the Troll. Use the LEFT/RIGHT key to select a food. Press ENTER to feed.

SLEEP

A couple times a day your Troll will want to sleep. Select this icon to put the Troll to sleep. You should put it to sleep at 9:30pm and wake it up again in the morning. Sometimes it is also good to let it nap after lunch.

PLAY

To keep your Troll happy, you should play with it often. When you select this activity, you will have 3 games you can play. Every time you beat a game, you advance to the next level in that game. The games will get more advanced the further you progress and you will need to really practice to master them. **Pro Tip:** Pressing, and sometimes holding, ENTER during a game will do different things. Watch out for the tree branches, birds, and sharks... If you lose a game, you will see a slot machine. You will get three chances to match up the eyes and recover some happiness. To skip the slot machine press MENU.

Be careful: If you don't keep the Troll happy you will only be able to play the two basic games in the slot machine menu.

DOCTOR

Sometimes your Troll will get sick. Select this activity to take your Troll to the doctor.

CLEANING

When your Troll is dirty use this activity to give the Troll a bath.

SCORE

Choose this icon to check on your Troll's progress. Use the LEFT/RIGHT keys to move through the screens showing your Troll's stats.

TRICKS

The Troll can do all sorts of interesting things. Select this icon and press either LEFT/RIGHT to select different tricks. Press ENTER and to tell the Troll to perform the trick. If the Troll performs a trick correctly you should REWARD him so he will get better at performing the trick correctly. Select the reward icon (a high five) to reward him.

REWARD (High Five)

Use this icon to reward your Troll when they perform a TRICK correctly.

RESTARTING THE GAME

If you wish to restart the game remove the battery from the device, wait 10 seconds then reinsert the battery. For any questions or concerns please contact hello@topsecrettoys.us

INSERTING THE BATTERIES

To insert new batteries, remove the battery compartment cover on the back of the device. (To remove cover, unscrew the cover and lift it out of the device). Insert one 3v "CR2032 button cell battery, making sure to align "+" and "-" as shown. CAUTION: Batteries should be replaced by adult. Not suitable for children under 36 months, may contain small parts.

TO ENSURE PROPER FUNCTION:

Battery installation should be done by adult. Non-rechargeable batteries are not to recharged. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

This device complies with Part 15 of the FCC rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: Change or modifications not expressly approved by the manufacturer responsible for complaints could void the user's authority to operate the equipment.

MADE IN CHINA